



W
I
N
D
O
W

P
A
R
T
S

| Item | Part # | Description | Item | Part # | Description |
|------|--------------|---|------|--------------|---|
| 1 | 162-1078LH | EMERGENCY EGRESS HANDLE-LH (used on FS-60 & FS-61 Egress Windows) | 38 | 197-1070-3 | TWIST LATCH BUSHING (used with item 37) |
| 2 | 162-1078RH | EMERGENCY EGRESS HANDLE-RH (used on FS-60 & FS-61 Egress Windows) | 39 | 362-3130-381 | TWIST LATCH (used on FS-59 & FS-61 Windows, with items 40 & 41) |
| 3 | 162-1123 | EGRESS HANDLE KEEPER (used on FS-74 Egress Windows) | 40 | 255-010629 | WAVE WASHER (used with items 39 & 41) |
| 4 | 711202K25 | EMERGENCY EGRESS HANDLE (used on FS-74 Egress Windows) | 41 | 220-014382 | SHOULDER RIVET (used with items 39 & 40) |
| 5 | 162-1047-1 | PULL LATCH (center latch used on FS-60 windows) | 42 | 001-014439 | TWIST LATCH KEEPER (used with item 39) |
| 6 | 162-1047-4 | PLASTIC SPACER (used with item 5) | 43 | 130-005153 | SCREEN SPRING CLIP (allows removal of sliding screens) |
| 7 | *162-1120 | RACK & RATCHET LATCH STOP (used with items 12 & 13, must specify length) | 44 | 97-4195-001 | LATCH SPRING- (used on WP1 & WP4 latches- alternate long leg #ST-48-101-1) |
| 8 | 197-1018-6 | LATCH & COVER ASSY (used with items 9 & 10, for dbl sliding flush sash windows) | 45 | 197-1140 | CENTER SQUEEZE LATCH SPRING (used on all center squeeze latches) |
| 9 | 345-0018-058 | ROLL PIN (used with items 8 & 10) | 46 | ST-49-225-7 | LATCH SPRING (used on WP2, WP50, WP51, & WP60 latches) |
| 10 | 197-1018-2 | LATCH CATCH (used with items 8 & 9) | 47 | 162-1063 | EMERGENCY ESCAPE HANDLE (used on FS-101 Egress Windows) |
| 11 | 197-1141 | LATCH BACKING PLATE (used with items 12 & 13) | 48 | 197-1111 | EMERGENCY HANDLE RETAINER (anti-rattle for item 47) |
| 12 | 197-1046-4 | RACK & RATCHET LATCH-LH (used on vertical slide windows) | 49 | 197-1128 | WINDOW STOP (used on FS-101 Egress Windows) |
| 13 | 197-1046-3 | RACK & RATCHET LATCH-RH (used on vertical slide windows) | 50 | 197-1123 | WINDOW CATCH (used on FS-101 Windows) |
| 14 | 162-1007-1 | BOTTOM MOUNT LATCH (used with items 15 or 16) | 51 | *162-1022 | WINDOW CATCH SLIDE BAR (used on FS-101 Egress Windows-shown with item 50) |
| 15 | 162-1029-1 | WINDOW STOP-BOTTOM CATCH (used with item 14) | 52 | 197-1057-01 | CYLINDER PISTON ASSY (holds open tip-in glass of FS-101 T Windows) |
| 16 | 162-1029-2 | WINDOW STOP-BOTTOM CATCH (used with item 14) | 53 | 197-1058-01 | LOWER PISTON BRACKET (used with item 54 to mount item 52) |
| 17 | 162-1069 | SMALL OVER CENTER LATCH (used on FS-64 & FS-103 Windows) | 54 | 197-1058-02 | UPPER PISTON BRACKET (used with item 53 to mount item 52) |
| 18 | 162-1109 | LARGE OVER CENTER LATCH-4 POSITION (used on FS-64 Windows) | 55 | 162-1088 | EGRESS HANDLE CABLE 19" (used on FS-101 Egress Windows) |
| 19 | *197-1131 | CONTINUOUS HINGE 27.5" LONG (specify alternative length) | 56 | 162-1054-04 | EGRESS HANDLE CABLE 3.465" (used on FS-101 Egress Windows) |
| 20 | GGs-40-040-K | GAS SPRING (holds open hinged window-used with item 25) | 57 | 197-1112-1RH | BRACKET (used on FS-101 Egress Windows) |
| 21 | GGs-44-040-I | GAS SPRING 12.25" LONG (also available in GGS-45-040 -14.75" long) | 58 | 197-1112-2LH | BRACKET (used on FS-101 Egress Windows) |
| 22 | 197-1103 | BALL STUD (used with item 21) | 59 | 197-1124 | WINDOW KEEPER (used on FS-101 Windows) |
| 23 | 197-1101 | END FITTING (used with item 21) | 60 | 374-26012 | RUBBER GROMMET (used with item 61) |
| 24 | 197-1102 | SAFETY CLIP (used with item 21) | 61 | 1B-0112-01 | SWITCH (used for Driver Signal on FS-101 Egress Windows) |
| 25 | 197-1130 | GAS SPRING MOUNTING BRACKET (used with item 21) | 62 | 197-1117 | SWITCH HOLDER (used with item 61) |
| 26 | 197-1120 | MOUNTING PAD (used with item 27) | 63 | 197-1097-1 | SWITCH STRIKER (used with item 61) |
| 27 | 197-1119 | FRICTION LOCK/PULL HANDLE MOUNTING PLATE (used with item 26) | 64 | 197-1027-1 | SPRING (used with item 51) |
| 28 | 162-1112 | LATCH BRACKET-(used with item 1 & 2) | 65 | 199-1059 | RUBBER WINDOW STOP (used to limit travel on slider windows) |
| 29 | 162-1089 | CORNER GUSSET (may be used to mount item 25) | 66 | 197-1003-1 | NYLON WINDOW STOP (limits travel on framed slider windows) |
| 30 | 198-1180-1 | HINGE (used on FS-64 Windows) | 67 | 197-1095-07 | ADJUSTABLE GLASS NUT (used with item 61, requires .56" diameter hole) |
| 31 | 197-1134 | METAL STUD PULL HANDLE (used with item 27) | 68 | 197-1095-04 | FLANGE NUT (used with item 67) |
| 32 | 197-1133 | NYLON STUD FRICTION LOCK HANDLE (used with item 33 or 34) | 69 | 197-1073-3 | T-NUT (used with item 70) |
| 33 | 197-1138 | FRICTION LOCK MOUNTING BRACKET-SLOPED (used with item 32) | 70 | 197-1073-4 | T-NUT BUSHING (used with item 69, requires .34" diameter hole) |
| 34 | 197-1118 | FRICTION LOCK MOUNTING BRACKET (used with item 32) | 71 | 97-4196-1 | NYLON NUT (requires .44" diameter hole) |
| 35 | 197-1028-6 | SLIDE BOLT LATCH SPRING (used with item 56) | 72 | 197-1107 | NYLON NUT-SQUARE HOLE (requires hole diameter of .56", .375" square) |
| 36 | 162-1045-1 | SLIDE BOLT LATCH (used on FS-61 & FS-74 Vertical Slide Windows) | 73 | 197-1126 | COUNTERSUNK WASHER (used with #8 x 3/8 Plasti-screw (not shown) & item 72) |
| 37 | 197-1070 | TWIST LATCH (used on FS-74 Windows with item 38) | 74 | 197-1128 | WINDOW STOP (limits slider sash travel) |

* Use as reference only, part # may differ dependant on specified length